

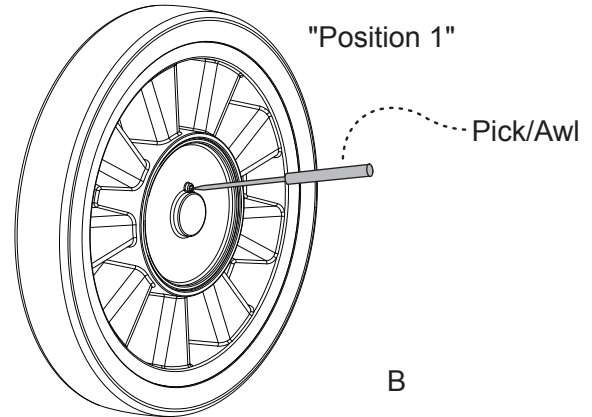
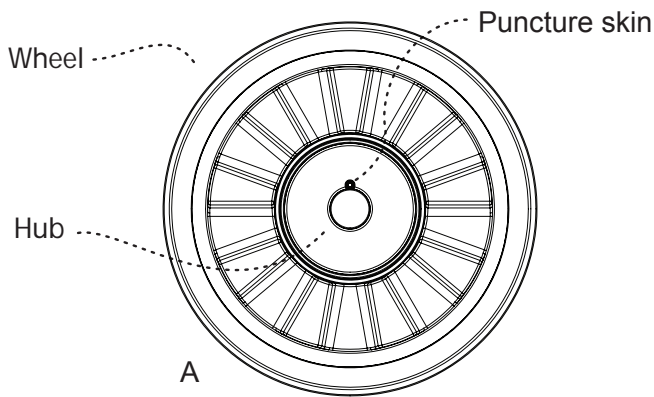


Removal instructions for **GEO Plastics'** stainless steel pin and spring Dura Snap Lock[®]


- 1.** Position the wheel as shown in image A. The small round opening called the "puncture skin" on the hub needs to be in the 12 o'clock position.
- 2.** Using a sharp pick or awl, press the sharp end pointed down into "Position 1" (Image B) of the puncture skin, to a depth of 1/4" or until the pick cannot be pressed in any further. Hold the pick here (Image B).

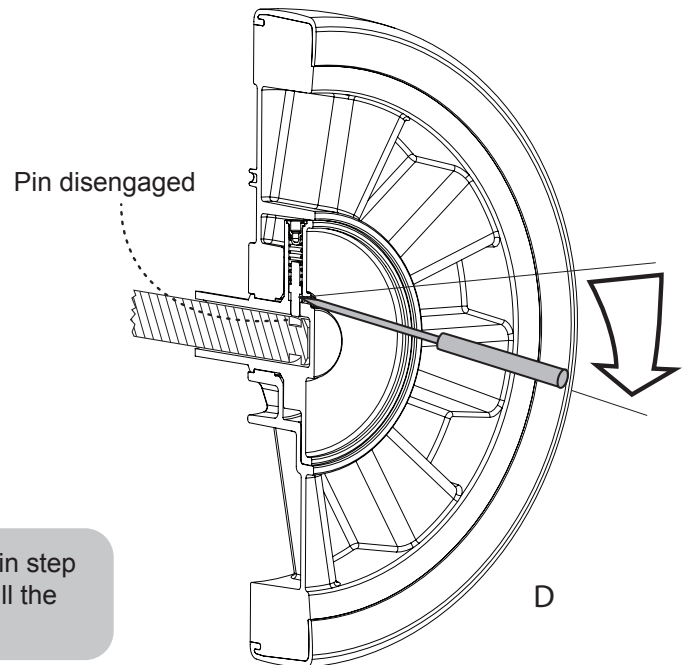

- 3.** Now move the pick's handle vertically down (Image C). This action lifts the pick end underneath the pin's shoulder (Image D), and hold this position. This lifts the locking pin and disengages it from the axle.

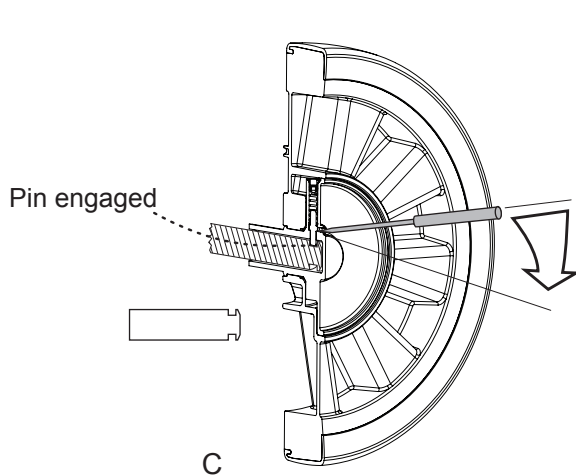

- 4.** Hold the pick depth and position established in step #3, place your hand behind the wheel and pull the wheel off the axle (Image E).

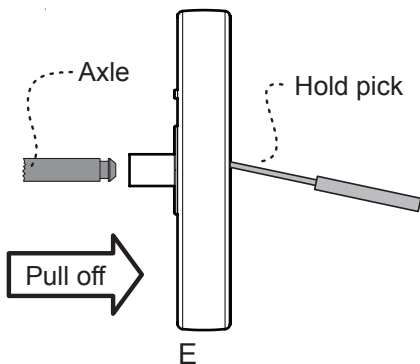

- 5.** To reattach the wheel, remove the pick and apply simple hand pressure when pressing the wheel against the grooved axle end. You should hear and feel the pin snap into the axle's groove indicating the wheel is attached.

TO ORDER REMOVAL PICK:

Visit www.mcmaster.com
part # 3842A23

Description: Hook and pick/positioner,
Straight pick, 5 1/2" overall length.