



# Removal instructions for **GEO Plastics'** Quick Release Snap-on Wheel


Viewing from inside the wheel, locate the spring activated release lever.

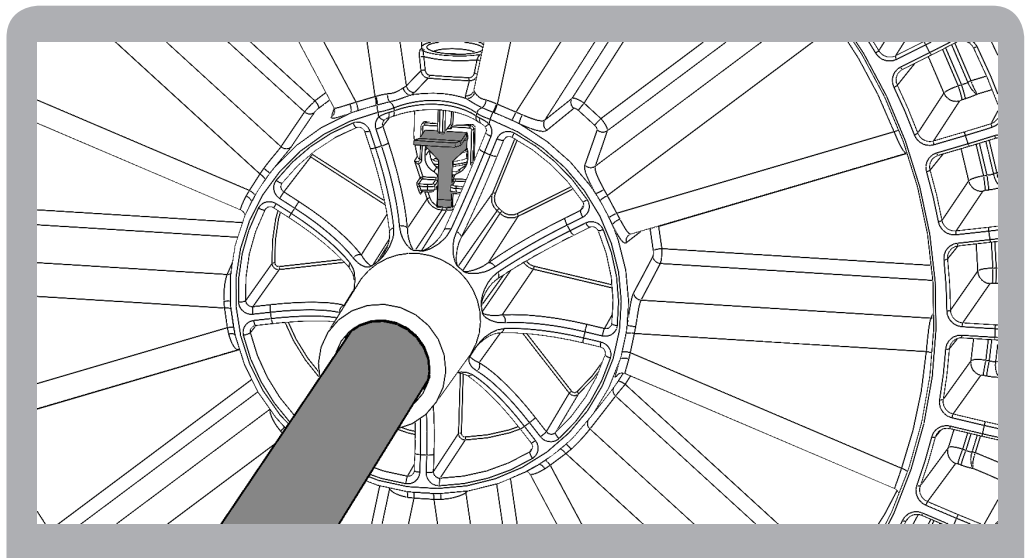

Depress the release lever fully and pull the wheel forward. Release pressure from the lever after the wheel is detached from the axle.

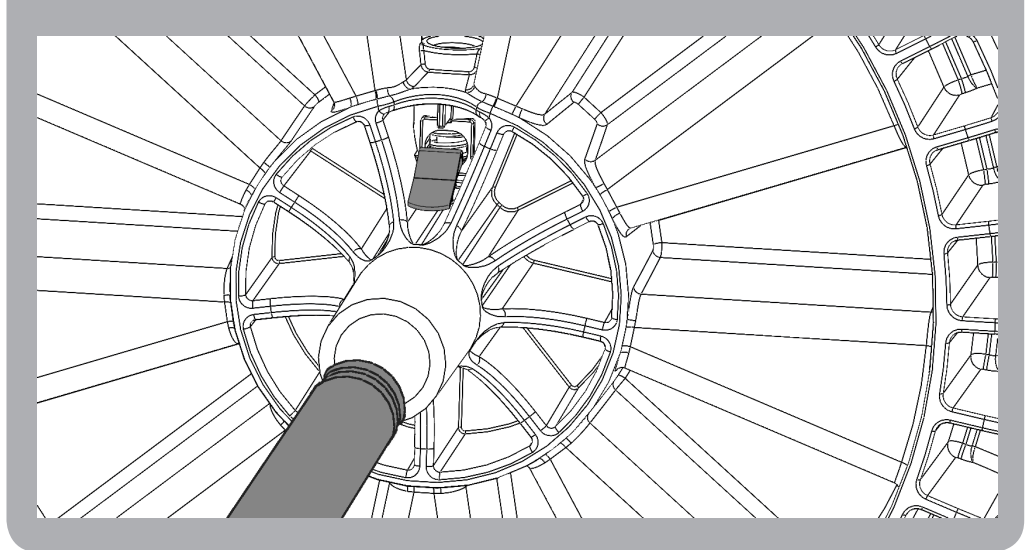

Locked position

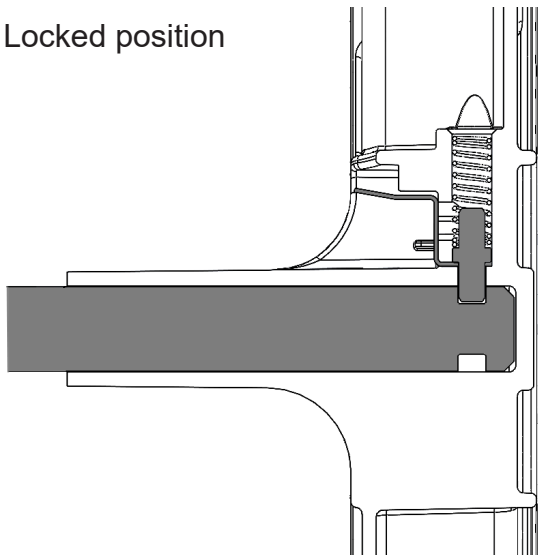

Released position

